


Operating Steps

Preparation before upgrading ONT software:

1

Before receiving folders containing ONT software, please close Windows Firewall, close all antivirus software on your computer, and exit other applications;

Then please place the folder on your computer desktop;

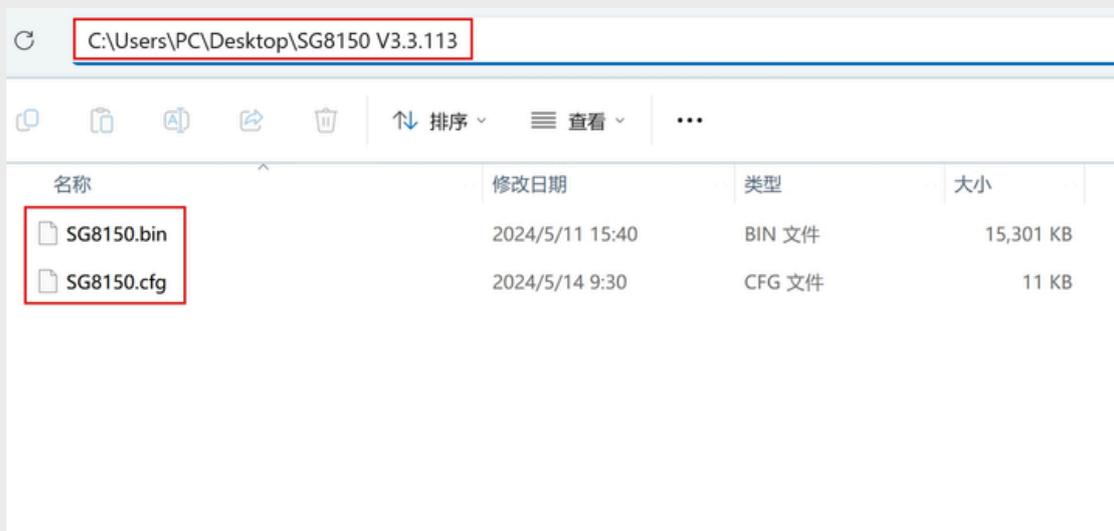

2

Please connect the computer to the ONT LAN 1 port using a LAN cable, and then power on the ONT; During this software upgrade process, please do not connect the ONT to the fiber optic cable;




SG8150/60

Webpage upgrade software operation instructions


3

Please select Internet (TCP/IPv4), and then change the computer LAN port IP to 192.168.1.100;

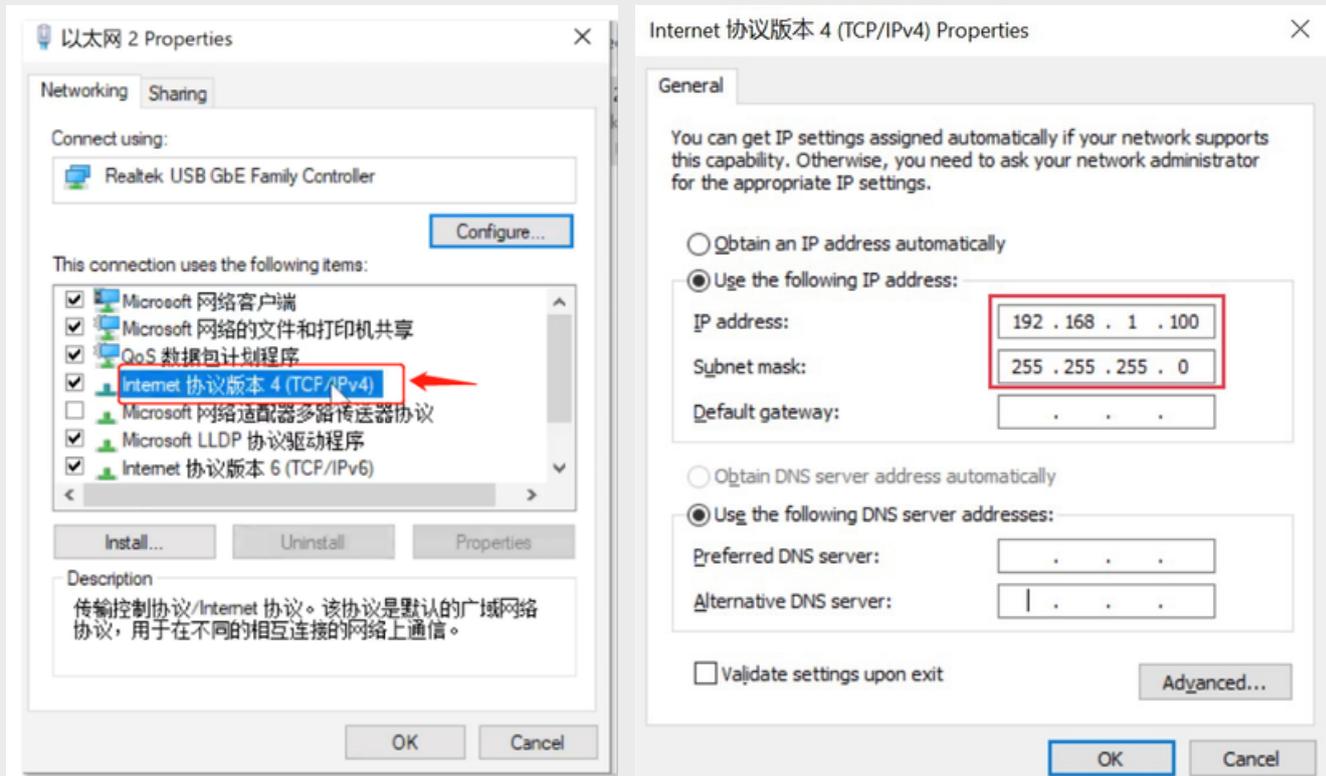

4

Please open the browser and enter the login address: 192.168.1.1; After waiting for the ONT web page to display, please enter: Username: SGadmin Password: Sg-link\$ Then click the "login" button to log in to ONT;

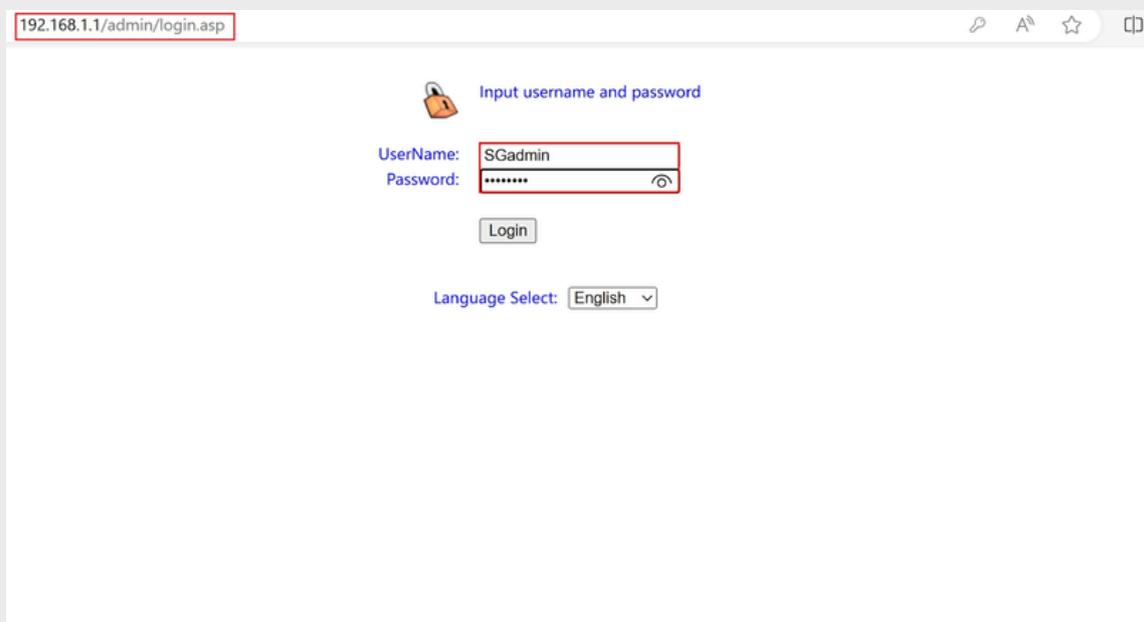


Operating Steps

ONT Upgrade



5

Please click on the "Admin" and "Firmware Upgrade" buttons in sequence;

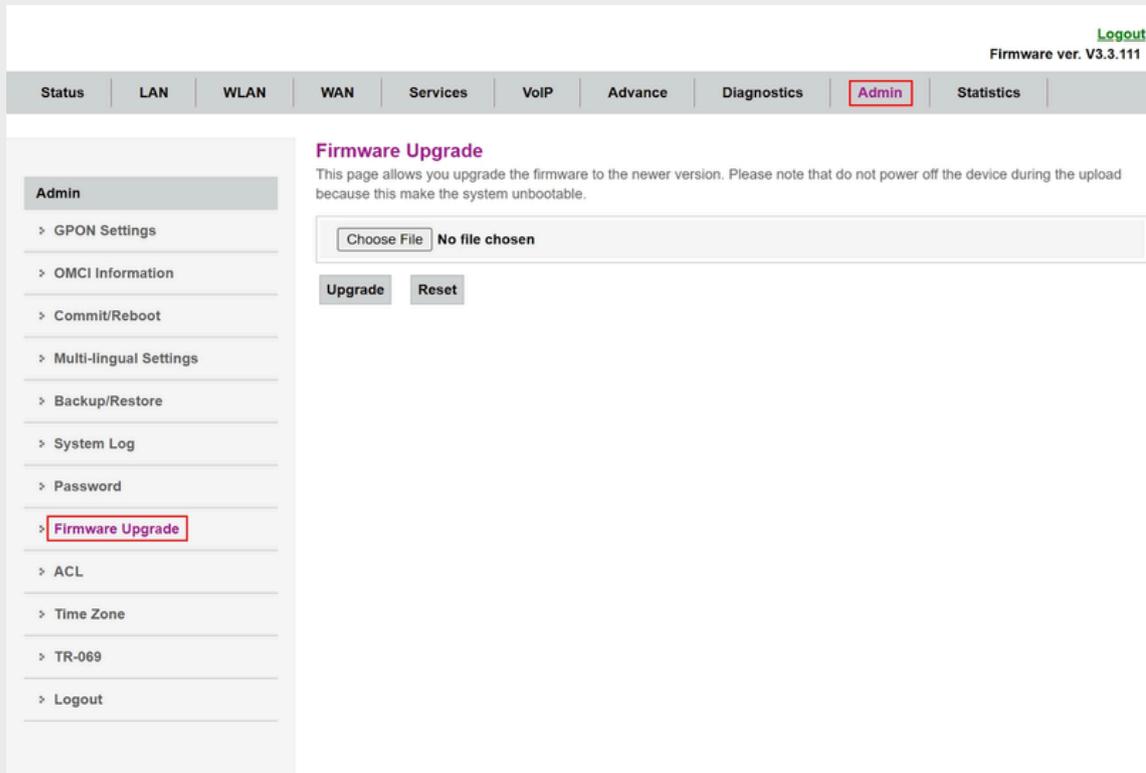

6

Please click the "Choose File" button, select the folder location where the ONT software is located, select the file named 《SG8150. bin》, then click the "Open" button, and finally click the "Upgrade" and "OK" buttons in sequence;

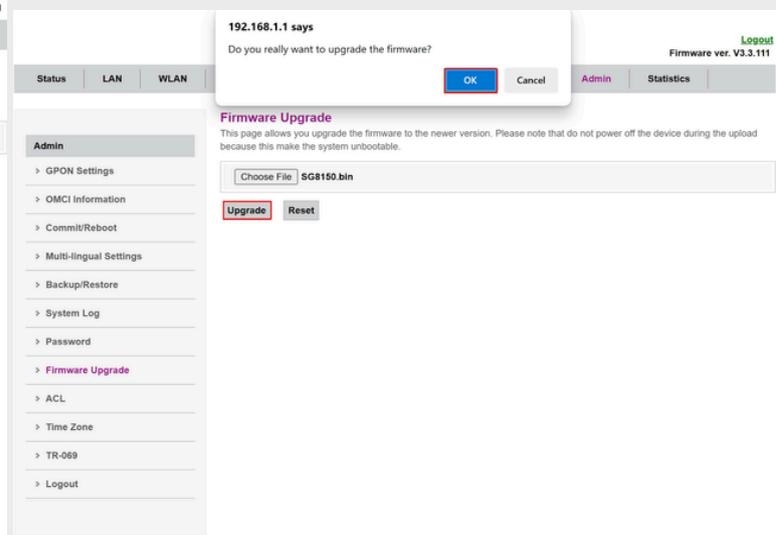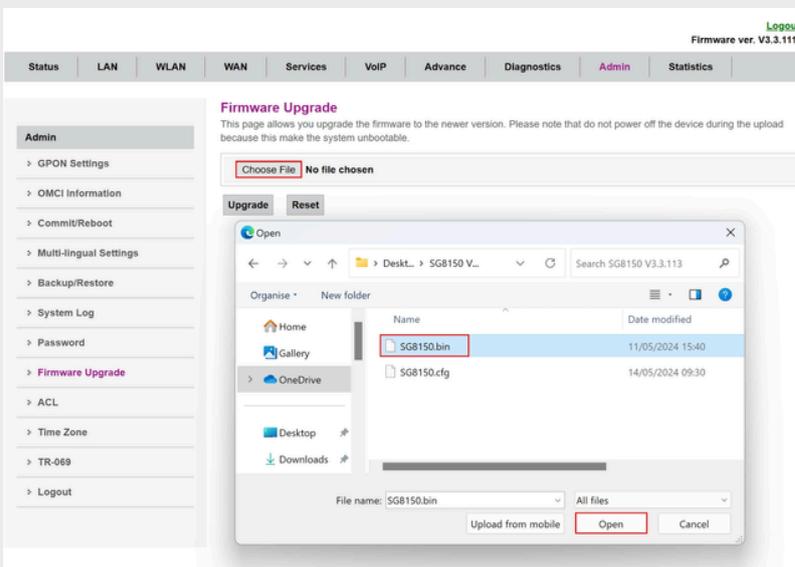


Operating Steps

ONT Upgrade

7

At this point, the files of the ONT software will start uploading, and the progress bar will start loading. When the progress bar is loaded to 100%, the software upgrade is completed;

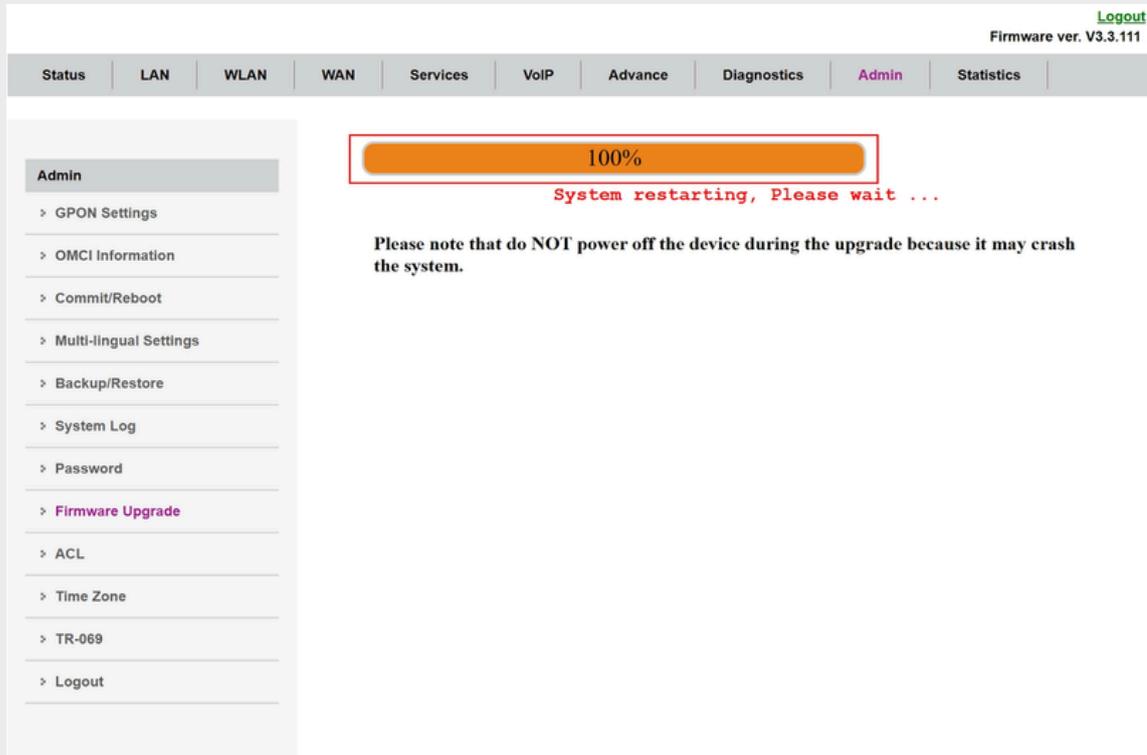


8

Please open the browser and enter the login address: 192.168.1.1;
After waiting for the ONT web page to display, please enter:

Username: SGadmin

Password: Sg-link\$

Then click the "login" button to log in to ONT;

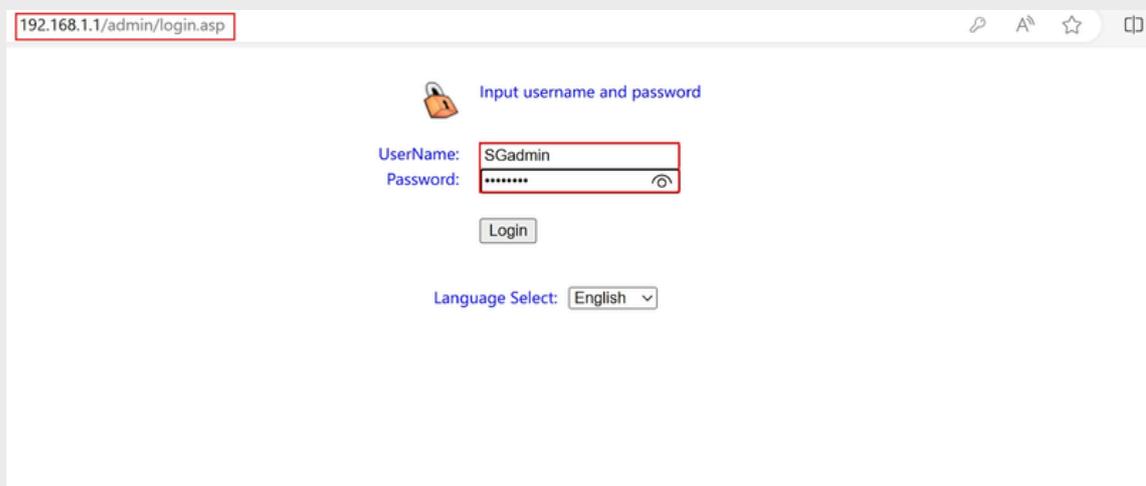


Operating Steps

ONT Upgrade


9

Please click on the "Admin" and "Firmware Upgrade" buttons in sequence;

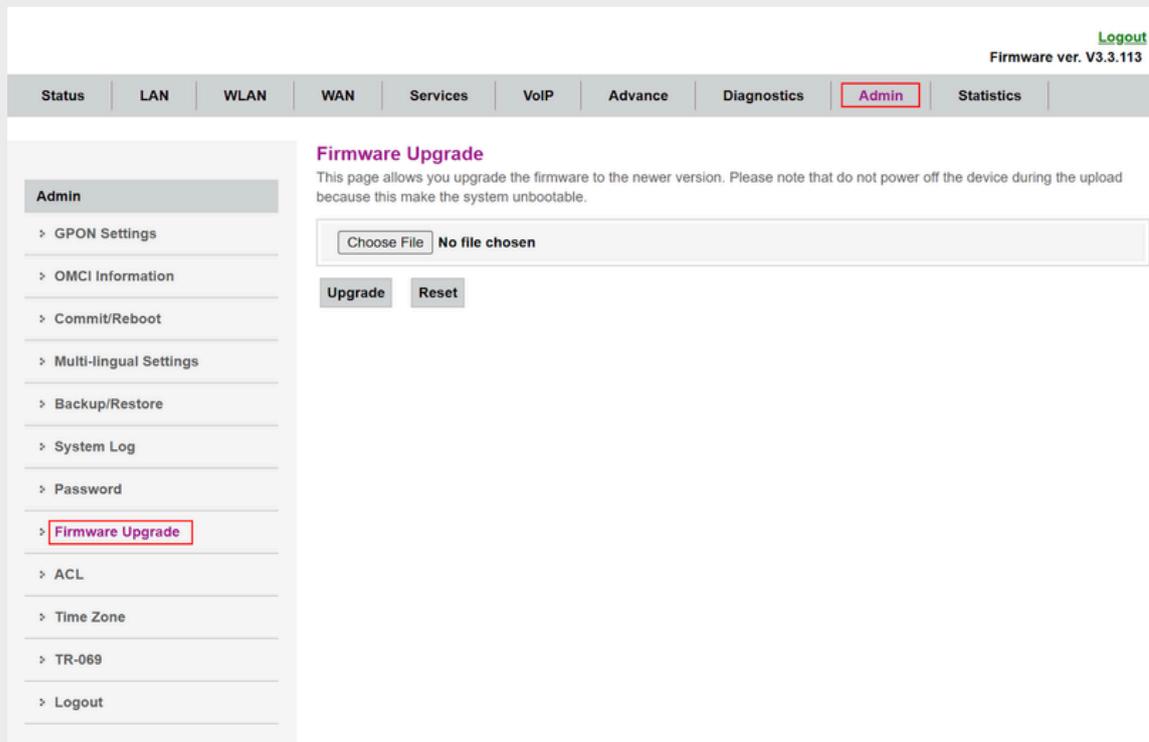

10

Please click the "Choose File" button, select the folder location where the ONT software is located, select the file named 《SG8150. cfg》, then click the "Open" button, and finally click the "Upgrade" and "OK" buttons in sequence;

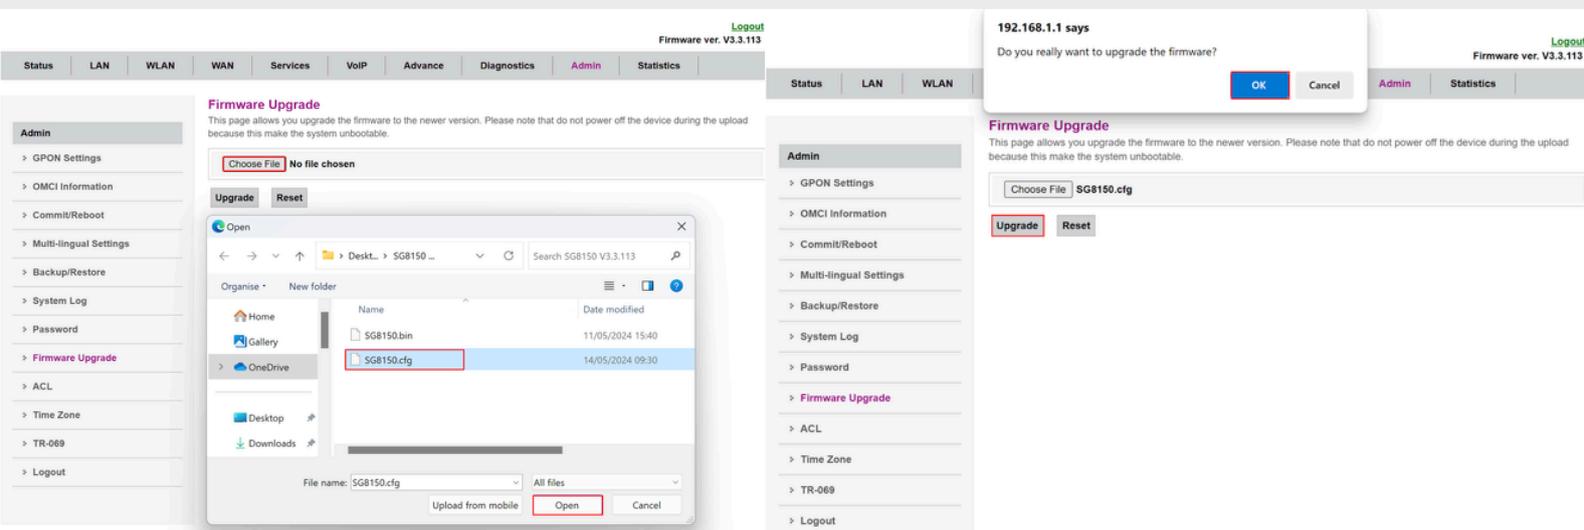

Operating Steps

ONT Upgrade

11

At this point, The configuration file for ONT will start uploading, and the progress bar will start loading. When the progress bar is loaded to 100%, The upgrade of ONT's configuration file is completed;

